
PENINSULA WALLPAPER

SPEC & CARE SHEET
NOVEMBER 2026

NATURAL COLLECTION

Wheat Paper Weave

PAPER WEAVE WALLCOVERING · N178NP6108 · WHEAT

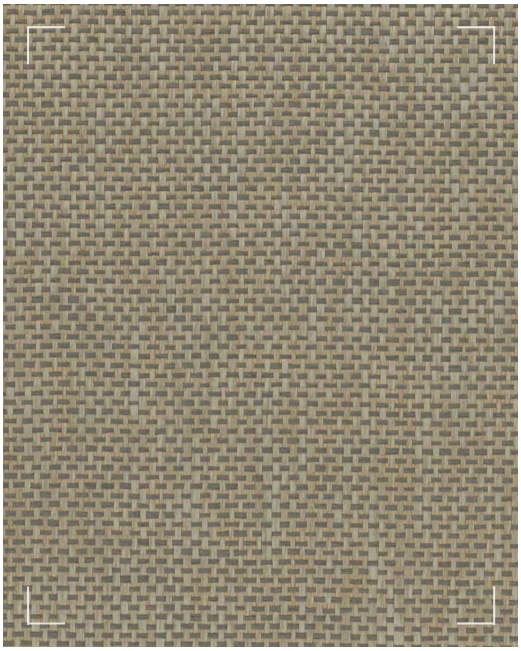

A virtually seamless paper weave in a soft wheat tone, with a fine, even basket texture.

TEXTURE DEPTH	MEDIUM
NATURAL VARIATION	MINIMAL
SHEEN	MATTE

COMPOSITION	100% woven paper on paper backing
WIDTH	0.91m (36")
ROLL LENGTH	10m
COVERAGE	≈ 9.1m² per roll
PATTERN REPEAT	Random, no repeat
HANGING	Non-reverse hang (every length hung the same way up); free match, double-cut seams
APPLICATION	Paste the wall and wet the back of the paper (or paste the back if preferred); double cut required
FIRE RATING	Group 2 — tested to AS ISO 9705-2003 for the Building Code of Australia (wall and ceiling linings); specific extinction area under 250 m²/kg
LEAD TIME	Allow 3–5 weeks · subject to mill stock
INSTALLATION NOTES	Double cut required. Professional installation recommended.

CARE

- Natural wallcoverings aren't stain-repellent treated, so treat the surface gently.
- Dust occasionally with a vacuum on a soft brush attachment.
- Trying something new? Test it on a hidden spot first, and if it isn't working, stop and contact us.
- Blot any spill straight away with a clean, dry, white cloth. Dab lightly, never rub.
- Don't use water, sprays or detergents on the surface.

NATURAL MATERIALS

- Colour, texture, weave and shading vary naturally between rolls — part of the material's character, not a defect.
- Order enough for the whole job from the same dye lot in a single order, and check each roll against the last before hanging.
- Hang every length the same way up (non-reverse hang) so the weave runs consistently across the wall.
- Sales of natural wallcoverings are final and non-refundable.

INSTALLATION GUIDE

01 Prepare the walls first — clean, dry, smooth, and primed. Natural wallcoverings telegraph any imperfection beneath them.

02 Paste the wall, then wet the back of the paper before hanging. If preferred, paste the back of the paper instead.

03 Double cut required: overlap adjoining drops slightly, cut through both layers with a sharp blade against a straight edge, then remove the offcuts for a clean, tight seam.

04 Work from a single batch and check each roll against the last before hanging.

05 Keep adhesive off the face. If any gets on the surface, gently dab with a damp microfibre cloth — never rub.

06 Professional installation is strongly recommended.

> **Professional installation recommended.** Peninsula Wallpaper installs across the Mornington Peninsula, Bayside Melbourne and the Gold Coast — email Projects@peninsulawallpaper.com.au to arrange a measure and quote.